

SWIMMER

CENTURI, INC.

245 W. 74TH PLACE

HIALEAH, FLA. 33014

CUSTOMER SERVICE:

TEL. #(305) 558-5200 (IN FLORIDA)
TEL. #(800) 327-7710 (OUTSIDE FLORIDA)

TELEX: 803694 ANSB CENTURI CABLE: CENTURI

"SWIMMER"

TABLE OF CONTENTS

I.	INTRODUCTION: PAGE NO.
	USER INFORMATION1
	NOTES2
	FRONT VIEW, SWIMMER, CABINET (FIG. 1)3
	FRONT VIEW CABINET, PARTS LIST FOR FIG. 14
	GAME DESCRIPTION SUMMARY5
TT.	OPERATION:
	GAME INSTRUCTION AND POIN SCORING6
	OPTIONAL SWITCH SETTINGS7
	INSTALLATION & ELECTRICAL REQUIREMENTS8
	110/220 VAC CONVERSION INSTRUCTIONS9
	110/220 VAC INTERCONNECT DIAGRAM, FIG. 2 (370-10-0400B)10
	ROUTINE MAINTENANCE & SERVICE, POWER SUPPLY11
III.	GAME PART DRAWINGS, PARTS LISTS & SCHEMATICS:
	EXPLODED VIEW OF JOYSTICK ASS'Y, FIG. 312
	EXPLODED VIEW OF JOYSTICK PARTS LIST13
	EXPLODED VIEW OF CONTROL PANEL & PARTS LIST, FIG. 414
	FRONT PLATE EXPLODED VIEW, FIG. 515
	FRONT PLATE EXPLODED VIEW, PARTS LIST16
	COIN DOOR EXPLODED VIEW, FIG. 6 (MECHANICAL)17
	COIN DOOR EXPLODED VIEW, PARTS LIST (MECHANICAL)18
	COIN DOOR EXPLODED VIEW, FIG. 7 (HARDWARE)19
	COIN DOOR EXPLODED VIEW, PARTS LIST (HARDWARE)20
	P.C.B. ASS'Y A 102-401, PARTS LIST (#50330030)21,22
	P.C.B. ASS'Y B 102-402, PARTS LIST (#50330031)23,24
	PSR-5110 SWITCHING POWER SUPPLY (#50350006, SCHEMATICS)25,26
	PSR-5110 SWITCHING POWER SUPPLY, PARTS LIST (#50350006)27,28
	C.P.U. HARNESS (385-12-0100)29
	CONTROL PANEL HARNESS (377-12-0400)30
	CABINET POWER HARNESS (370-12-0200 B)31
	COMPLETE GAME LESS/PKG. & PARTS LIST (385-01-0200)32
	SCHEMATICS

<u>USER_INFORMATION_ - F.C.C.</u>

WARNING

THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY, AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE INTERFERENCE TO RADIO COMMUNICATIONS. AS TEMPORARILY PERMITTED BY REGULATION, IT HAS NOT BEEN TESTED FOR COMPLIANCE PURSUANT TO SUBPART J OF PART 15 OF F.C.C. RULES, WHICH ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST SUCH INTERFERENCE. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE INTERFERENCE IN WHICH CASE, THE USER AT HIS OWN EXPENSE WILL BE REQUIRED TO TAKE WATEVER MEASURES MAY BE REQUIRED TO CORRECT THE INTERFERENCE.

INTRODUCTION

"SWIMMER" IS A MICROPROCESSOR BASED COIN-OPERATED ELECTRONIC GAME, THAT MAKES EXTENSIVE USE OF DIGITAL INTEGRATED CIRCUITRY AND TELEVISION MONITOR CONCEPTS. THIS MANUAL IS DESIGNED FOR THE USE OF MAINTENANCE TECHICIANS WHO POSSESS A GENERAL WORKING KNOWLEDGE OF SOLID-STATE CIRCUITRY, AND VIDEO MONITOR THEORY. ANY INDIVIDUAL NOT KNOWLEDGEABLE IN THESE AREAS SHOULD NOT ATTEMPT REPAIR OF THE ELECTRONIC PORTIONS OF THE GAME.

IN ADDITION TO THIS MANUAL AND TRAINING IN ELECTRONICS, TROUBLE-SHOOTING AND REPAIR WILL BE FACILITATED BY ACCESS TO GENERAL-TYPE HANDTOOLS, A MULTIMETER, A 50 OR 100 MHZ OSCILLOSCOPE AND A LOGIC PROBE WOULD BE HELPFUL.

TECHNICAL ASSISTANCE IS AVAILABLE BY CALLING (305) 558-5200. QUESTIONS OR COMMENTS CONCERNING "SWIMMER" OR ANY OF OUR GAMES ARE WELCOME AND SHOULD BE DIRECTED TO:

CENTURI, INC.

CUSTOMER SERVICE DEPARTAMENT
#800-327-7710 (outside the State of FLA.)
#305-556-5888 (in Florida)

NOTES

<u>NEVER</u> REPLACE ANY COMPONENTS WITH ANYTHING OTHER THAN EXACT REPLACEMENT PARTS.


NEVER REMOVE CIRCUIT BOARD CONNECTIONS WHILE POWER IS ON.

DO NOT REPLACE THE FUSE WITH ANYTHING OTHER THAN THE PROPER VALUE.

A BLOWN FUSE INDICATES AN OVERLOAD CONDITION WITHIN THE GAME.

REPLACING THE FUSE WITH A HIGHER VALUE CAN CAUSE SEVERE DAMAGE
TO INTERNAL COMPONENTS IF AN OVERLOAD OCCURS.

ALWAYS CONSULT THE MANUAL BEFORE ATTEMPTING REPAIRS.

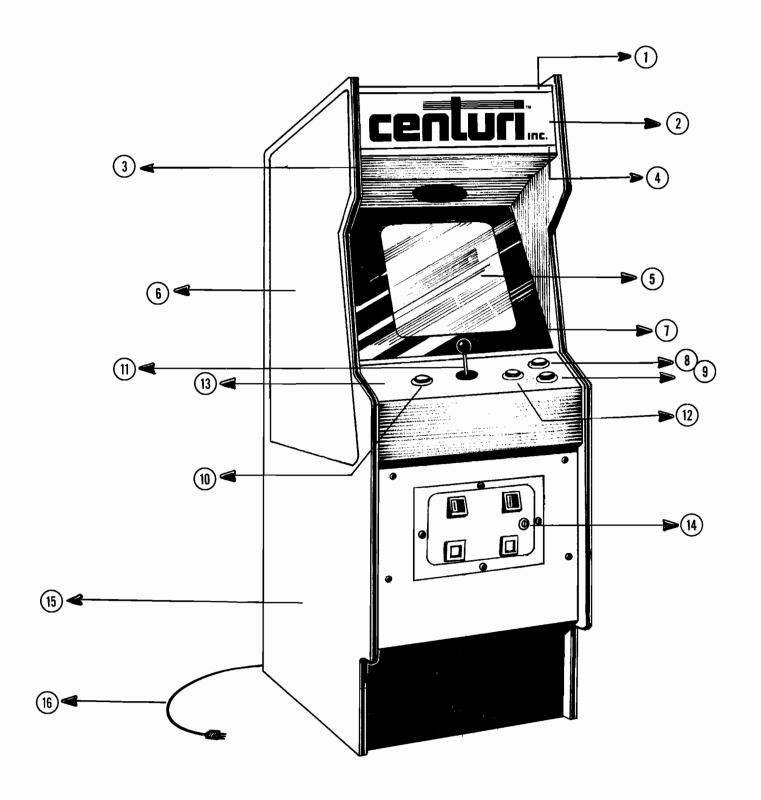

(FIG,1) FRONT VIEW OF CABINET.

SWIMMER CABINET

(FIGURE 1)

ITEM	CENTURI P/N:	DESCRIPTION:
1.	343-03-0200	TOP ANGLE HOLD DOWN BRACKET
2.	385-06-0100	SILK SCREENED MARQUEE PANEL
3.	361-10-0200	VINYL TRIM, 7 1/4" LONG
4.	361-03-0100	GLASS HOLDING BRACKET
5.	361-04-1000	VIEWING GLASS
6.	385-06-0200 385-06-0600 385-06-0300 385-06-0700	LEFT TOP DECAL LEFT BOTTOM DECAL RIGHT TOP DECAL RIGHT BOTTOM DECAL
7.	385-06-0500	SILK SCREENED MONITOR OVERLAY
8.		1-PLAYER START BUTTON
9.		2-PLAYER START BUTTON
10.		DIVE BUTTON - LEFT
11.	50130109	8-POSITION JOYSTICK
12.		DIVE BUTTON - RIGHT
13.	385-14-0200	CONTROL PANEL WIRED ASS'Y
14.	360-01-0600	COINCO COIN DOOR
15.	385-01-0400	WOOD CABINET ASS'Y
16.	361-12-0900A	LINE CORD

"SWIMMER"

Game Description:

Continuing with its policy of producing high quality games, Centuri, Inc., adds to its successful line, "SWIMMER". Centuri incorporates into this game, all the elements of sight and sound necessary to attract a player of any skill level.

The player controls the "Swimmer" with the 8 way joystick and avoids obstacles using the "Dive" Button.

The game "Swimmer" consists of 4 different rounds of play which are as follows:

ROUND 1: The Swimmer must avoid the logs and turtles while collecting the maximum of fruits as he can. To complete the round, the Swimmer should dive under the "giant crab". If during any round you lose the Swimmer the round is restarted at the same level in which the Swimmer was lost but without any fruit. In order to receive the highest bonus, all fruits shown on the instruction panel must be collected.

ROUND 2: Round 2 differs from Round 1 in that "guerrilla crabs" replace the turtles as obstacles and the number of logs and crabs are increased. A new element called "power feed" appears in this round. Upon taking the "power feed" pill, the Swimmer is transformed into a super power for a short period of time. While a super power, the Swimmer can eat the "querilla crabs" as well as the fruit. The sound changes to warn the player when the super power of the Swimmer is about to fade away. The end of the round is completed by avoiding the "giant crab". Points are awarded by eating fruits or destroying enemies.

ROUND 3: This fast-paced round includes water-spiders that move randomly in any direction and changing their direction unexpectedly. The "power feed" enables the Swimmer to stay alive until the "giant crab" appears. Again, the crab should be avoided.

ROUND 4: This is the most difficult round of the game and starts with a pond that has boulders in it. Three "piranhas" challenge the Swimmer. The "power feed" should be used to destroy the "piranhas" before their heads flash red. When all the "cannibal piranhas" are destroyed, the mission is complete and the Swimmer is displayed on the Treasure Island and awarded all bonuses gained.

If any Swimmers are remaining, the game restarts with Round 1 but becomes more difficult and faster.

Manufactured Under License from Tehkan, Ltd.

"SWIMMER" GAME INSTRUCTIONS

- 1. Insert Coin(s). Push Start Button.
- 2. Control Swimmer with joystick.
- 3. To dive push joystick forward and depress Dive Button at the same time.
- 4. Collect fruits for points.
- 5. Avoid Logs.
- 6. Avoid Crabs, Water Spiders and Piranhas except when you are energized by catching "POWER FEED".

7.	Bonus:		<u>1st</u>	2nd	<u>3rd</u>	<u>4th</u>
		Strawberries	100	200	300	400
		Bananas	200	400	600	800
		Grapes	300	600	900	1200
		Melon	400	800	1200	1600

- 8. Free Swimmer at 10,000 pts. or when you match the lucky numbers.
- 9. Game over when all Swimmers are used.

SCORING FOR EATING FRUITS

	<u>1st</u>	2nd	3rd	4th
Cherries	50	100	150	200
Peaches	50	100	150	200
Apples	50	100	150	200
Oranges	50	100	150	200

DIP SWITCH SETTINGS

The following Dip Switches for the Game "SWIMMER" are found on the C.P.U. Board. The settings are a guide in selecting optional game format.

DIP	SWITCH	A (8	P DIP	SWITCH	ı)_			,
	SW.1	SW.2	SW.3	SW.4	SW.5	SW.6	SW.7	SW.8
1 Coin, 1 Play							Off	Off
1 Coin, 2 Play							On	Off
1 Coin, 3 Play							Off	On
1 Coin, 6 Play							On	On
1 Coin, 1 Play					Off	Off		
2 Coin, 1 Play					On	Off		
1 Coin, 2 Play					Off	On		
1 Coin, 3 Play					On	On		
10,000 Point - 1 EXTR	A		Off	Off				
20,000 Point - 1 EXTR	A		On	Off				
30,000 Point - 1 EXTR	A		Off	On				
No EXTRA			On	On				
3 SWIMMER	Off	Off						
4 SWIMMER	On	Off						
5 SWIMMER	Off	On						
FREE PLAY	On	On						
DIP S	SWITCH B	(4 P	DIP S	WITCH)	_			
	SW	.1 SW	.2 <u>sw</u>	.3 SW	. 4			
COCKTAIL TABLE	Of							
UPRIGHT	On							
NO SOUND IN DEMONSTRAT	TION	Of	f					
SOUND IN DEMONSTRATION	1	On						
BIGINNER (EASY)			Of	f Off				
DIFFICULT			Of	f On				
VERY DIFF.			0	n On				

INSTALLATION

Your game was shipped from the factory in ready-to-play condition. A brief inspection is suggested before the machine is removed from the carton. If there is damage to the shipping carton, contact the freight carrier for claim purposes. External damage could indicate possible damage to the cabinet and/or electronics components.

After the carton has been satisfactorily inspected, remove the machine from the shipping carton.

Examine the interior of the game for disconnected wires, cables, or harnesses. Make sure the electronic devices are securely mounted in their sockets, etc. Record the game serial number, since it will be required for reference and servicing.

ELECTRICAL REQUIREMENTS

Unless otherwise specified, this game is set to operate at 110 Volts A.C. (See Fig. 2 and 110/220 VAC conversion instructions.)

Power supply chasis schematic information and parts list are included in this manual.

110/220 VAC CONVERSION INSTRUCTIONS

This game contains a harness configuration which allows the machine to be operated from either a 110 VAC or 220 VAC, 50 Hz or 60 Hz power source. All games shipped from Centuri, Inc., are in the 220 VAC configuration. To change to the 220 VAC configuration follow the procedure below.

FIRST: Unplug the machine from the wall outlet to completely eliminate shock hazards.


SECOND: Remove the single 3 AMP slow-blow fuse found in the A.C. Distribution Bracket, and install two, 1.5 AMP slow-blow fuses. Next cut the #18 AWG. white jumper at both ends of the fuse holder, and replace the cover.

THIRD: On the game power transformer, locate the "orange" jumper plug which is marked, 110 VAC. Unplug the "orange" jumper, and plug in the "red" jumper marked 220 VAC.

To revert back to 110 VAC, replace the components originally removed from the Steps above.

***NOTE: The common side of the A.C. Line must not be fused in the 110 VAC configuration- Replace the #18 AWG., white jumper wire.

(Refer also to FIG. 2, 110/220 POWER INTERCONNECT DIAGRAM, #370-10-0400B)

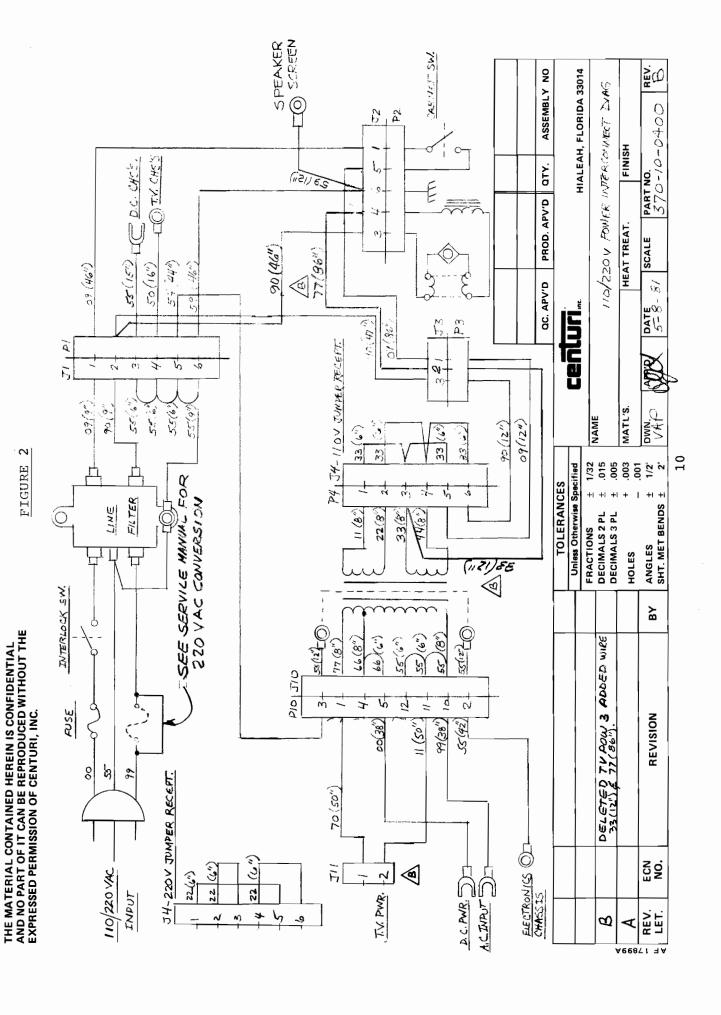

ROUTINE MAINTENANCE & SERVICE

Because of the solid state electronic circuitry, this machine should require very little maintenance, and only occassional adjustments. However, it is necessary to take steps to insure this.

The volume control is located on the bottom side of the printed circuit board, farthest from the side of the cabinet, and can be accessed through the rear door.

The video monitor has been properly adjusted before shipping. Occassionally minor adjustments are necessary. Technical information, along with schematics, can be found in this manual. Adjustment controls for the monitor are located on the rear of the monitor.

"DO NOT MAKE ANY ADJUSTMENTS ON THIS MACHINE WHILE THE POWER IS ON!" This machine should only be adjusted by a "qualified" technician.

For Service Information, contact:


CENTURI, INC.

CUSTOMER SERVICE DEPARTMENT #800-327-7710 (Outside the State of Fla.) #305-556-5888 (In Florida)

POWER SUPPLY


The Computer Board in this game operates most efficiently and reliably when the power supply is set so the voltage on the Board is 5.0 Volts, ±0.1 Volts. To check this, place a meter across 5 Volts, and ground, at the edge connector. If necessary, adjust the screwdriver control on the power supply, so the meter reads between 4.9 and 5.1 Volts.

(FIG. 3)EXPLODED VIEW OF JOYSTICK ASSY
2-4-8 Way JOYSTICK

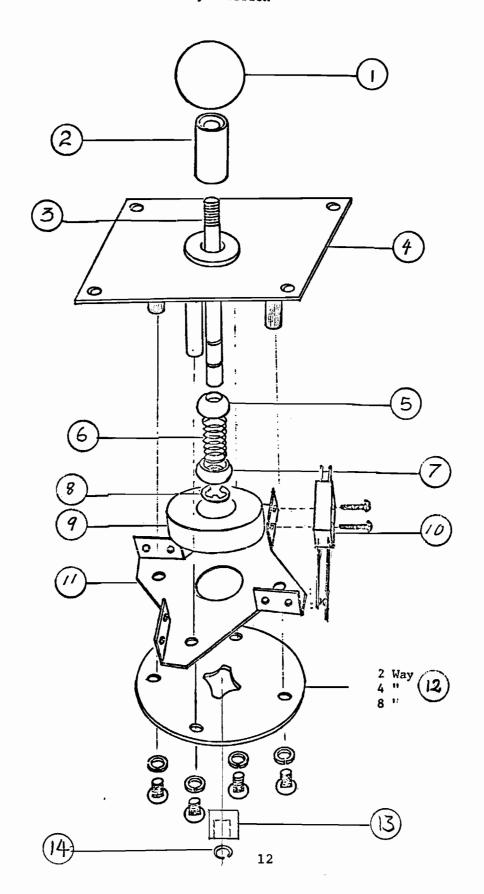


JOYSTICK 8 WAY MONROE LEAF SW. ASS'Y PARTS LIST

ITEM	CENTURI P/N:	DESCRIPTION:	QNTY.
1.	50130079	1 1/4" O.D. BALL	1
2.	50130080	SPACER	1
3.	50130110	SHAFT	1
4.	50130082	TOP PLATE WELDING ASS'Y	1
5.	50130083	TOP BALL	1
6.	50130084	SPRING	1
7.	50130085	BOTTOM BALL	1
8.	50130086	E-RING	1
9.	50130087	NYLON ACTUATOR	1
10.	50130078	MOLDED BLADE SW., WICO	4
11.	50130091	BOTTOM SUPPORT PLATE	1
12.	50130088	2 WAY FUNCTION PLATE	1
	50130089	4 WAY FUNCTION PLATE	1
	50130090	8 WAY FUNCTION PLATE	1
13.	50130111	ROLLER	1
14.	50130112	C-RING	1

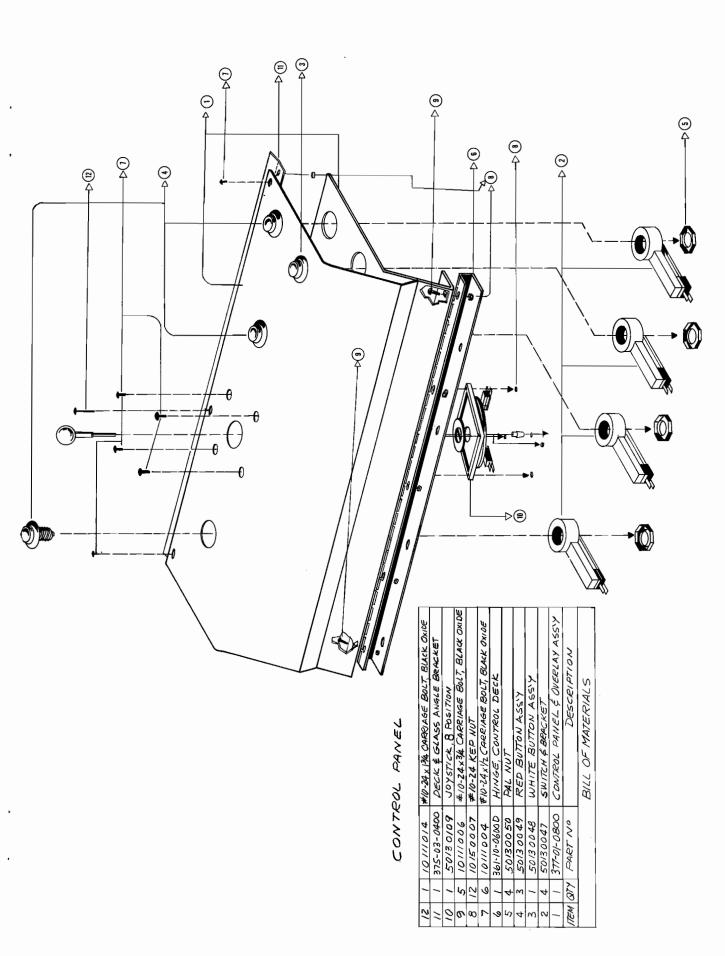

(FIG,4) EXPLODED VIEW OF CONTROL PANEL ASS'Y.

2800-0 FRONT PLATE EXPLODED VIEW 25¢ COIN

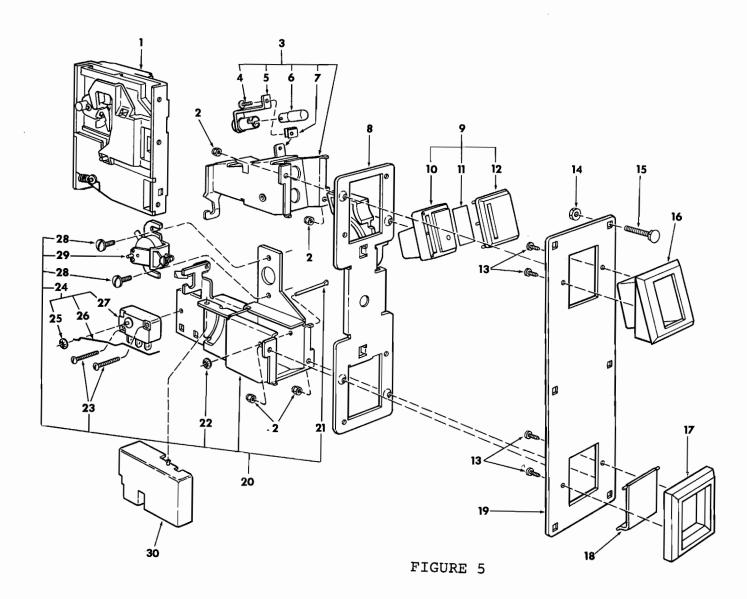


index	Part		index	Part	
No.	No.	Description	No.	No.	Description
1	5301-10	25¢ Coin Acceptor	16	904588	Coin Inlet Housing
2	400-4	#4-40 Self Locking Nut	17	904590	Coin Return Cover
3	404351	Coin Inlet Chute Assembly	18	904599	Coin Return Door
4	110-4-6	4 x 3/8 Screw	19	404463	Frontplate Assembly, 3-1/8" x 9-1/4"
5	904717	Lamp Socket	20	404350	Coin Return Chute Assembly
6	904716	#47 Lamp (6.3 Volt)	21	905115	Bar
7	904712	Fastener	22	904936	Keeper
8	404464	Inner Panel/Lever Assembly	23	100-4-12	4-40 x 3/4 Screw
9	404348	Coin Return Button Assembly	24	404353	Switch & Wire Assembly
10	904591	Coin Return Button	25	900651	Retainer
11	904703	25¢ Price Decal	26	904710-1	Switch Wire-Silver
12	904589-2	Reject Cover Button (25¢)	27	904845	Switch
13	345-4-5	#4 x 5/16 Pan Head Screw	28	100-6-3	6-32 x 3/16 Screw
14	406-10	#10-24 Hex Nut	29	404354	12 Volt Crem Assembly
		(Mounting Hardware)	30	904762	Switch Cover
15	905022	#10-24 x 1-1/8 Carriage Bolt (Mounting Hardware)			

2800-0 FRONT PLATE EXPLODED VIEW (FIGURE 5) PARTS LIST

$\underline{\text{NO}}$.	CENTURI P/N:	MANUFACTURING P/N:	DESCRIPTION:
1.	50270144	5031-10	25¢ COIN ACCEPTOR
5.	50270169	904717	LAMP SOCKET
6.	50270170	904716	#47 LAMP(6.3 VOLT)
8.	50270172	404464	INNER PANEL/LEVER ASS'Y.
10.	50270145	904591	COIN RETURN BUTTON
11.	50270146	904703	25¢ PRICE DECAL
12.	50270147	904589-2	REJECT COVER BUTTON (25¢)
16.	50270149	904588	COIN INLET HOUSING
17.	50270157	904590	COIN RETURN BEZEL
18.	50270150	904599	COIN RETURN DOOR
19.	50270173	404463	FRONTPLATE ASS'Y. $(3^{1}/8"x9\frac{1}{4}")$
21.	50270168	905115	BAR
25.	50270141	900651	RETAINER
26.	50270142	904710-1	SWITCH-WIRE, SILVER
27.	50130061	904845	SWITCH
29.	50270165	404354	12 VOLT C.R.E.M. ASS'Y.
30.	50270164	904762	SWITCH COVER
29.	50270165	404354	12 VOLT C.R.E.M. ASS'Y.

2800 SERIES COIN DOOR EXPLODED VIEW

25¢ U.S. COIN

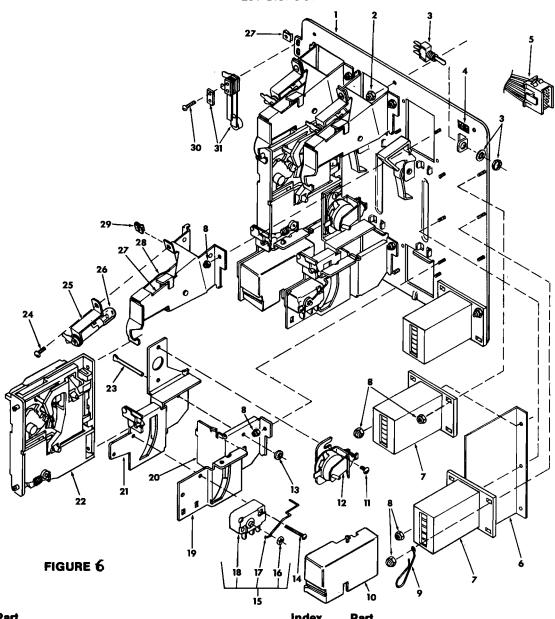

index			Index		_
No.	No.	Description	No.	No.	Description
1	404429	Inner Panel With Levers Sub-Assembly	17	904710-1	Silver Switch Wire — for U.S. 25¢ Coin
2	400-8	Nut	18	904845	Switch
3	904782	Toggle Switch	19	904701	Coin Chute
4	904706	Test Switch Decal	20	904598	Coin Return Box
5		Custom Harness Assembly	21	404428	Switch and C.R.E.M. Coil Bracket
6	904822	Insulation		707720	Assembly
7	404352	Coin Counter Assembly (6 Volt D.C.)	22	5301-10	25¢ Acceptor
8	400-4	Nut	23	905115	Bar
9	904722	Wire Key Holder	24	110-4-6	Screw
10	904762	Switch Cover	25	904717	Miniature Bayonet-Base Lamp
11	100-6-3	Screw	20	004717	Socket
12	404354	C.R.E.M. Coil Assembly.	26	904716	#47 Lamp (6.3 Volt)
		12 Volts D.C.	27	404418	Coin Inlet Chute Sub-Assembly
13	904936	Keeper	28	904594	Right Half of Coin Inlet Chute
14	100-4-12	Screw	29	904712	"U"-Type Fastener
15	404353	Coin Switch Assembly for U.S.		116-4-8	Screw
		25¢ Coin		904704	Slam Switch Assembly
16	900651	Retainer	٠.	33.7.34	Country Country


2800 SERIES COIN DOOR EXPLODED VIEW

25¢ U.S. COIN

(FIGURE 6)

NO.	CENTURI P/N:	MANUFACTURING P/N:	DESCRIPTION:
1.	50270160	404429	INNER PANEL w/LEVERS SUBASS'Y.
3.	50130062	904782	TOGGLE SWITCH
4.	50270161	904706	TEST SWITCH DECAL
5.	364-62-1000A		CUSTOM HARNESS ASS'Y.
6.	50270162	904822	INSULATION
7.	50270140	404352	COIN COUNTER ASS'Y.
9.	50270163	904722	WIRE KEY HOLDER
10.	50270164	904762	SWITCH COVER
12.	50270165	404354	C.R.E.M. COIL ASS'Y. (12 VOLT D.C.)
17.	50270142	904710-1	SILVER SWITCH WIRE- FOR 25¢ U.S. COIN
18.	50130061	904845	SWITCH
19.	50270143	904701	COIN CHUTE
20.	50270166	904598	COIN RETURN BOX
21.	50270167	404428	SWITCH & C.R.E.M. COIL BRACKET ASS'Y.
22.	50270144	5301-10	25¢ ACCEPTOR
23.	50270168	905115	BAR
25.	50270169	904717	MINIATURE BAYONET-BASE LAMP SOCKET
26.	50270170	904716	#47 LAMP(6.3 VOLTS)
27.	50270171	404418	COIN INLET CHUTE-SUBASS'Y.
31.	50130063	904707	SLAM SWITCH ASSEMBLY

2800 SERIES COIN DOOR EXPLODED VIEW 25¢ U.S. COIN

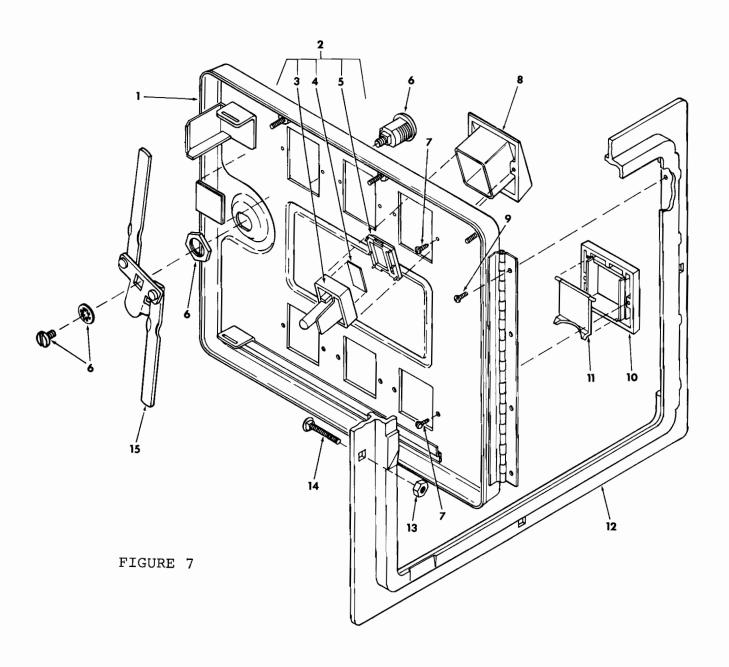

Index No.	Part No.	Description	index No.	Part No.	Description
		•			•
1	404341	Coin Door Only (2 Coin)	7	345-4-5	Screw
	404341-1	Coin Door Only (3 Coin)	8	904588	Coin Button Housing
2	404348-1	Coin Return Button Assembly for	9	325-4-4	Screw
		U.S. 25¢ Coin	10	904590	Coin Return Bezel
3	904591	Coin Return Button	11	904599	Coin Return Cover
4	904703	U.S. 25¢ Price Decal	12	904581	Coin Door Frame, 11-5/8" x 13-3/8"
5	904589-2	Coin Return Button Cover for U.S. 25¢ Coin			Mounts in a 10-3/8" x 12-3/16" Opening
6	904707-1	Lock Assembly	13	406-416	Hex Nut
			14	904734	Carriage Bolt
			15	404357	Locking Arm Assembly

2800 SERIES COIN DOOR EXPLODED VIEW

25¢ U.S. COIN

(FIGURE 7)

$\underline{\text{NO}}$.	CENTURI P/N:	MANUFACTURING P/N:	DESCRIPTION:
1.	50270152	404341	COIN DOOR ONLY (2 COIN)
2.	50270158	404348-1	COIN DOOR BUTTON ASS'Y. FOR U.S. 25¢ COIN
3.	50270145	904591	COIN RETURN BUTTON
4.	50270146	904703	U.S. 25¢ PRICE DECAL
5.	50270147	904589-2	COIN RETURN BUTTON COVER
6.	50270148	904707-1	LOCK ASSEMBLY w/KEYS
8.	50270149	904588	COIN BUTTON HOUSING (INLET HOUSING)
10.	50270157	904590	COIN RETURN BEZEL
11.	50270150	904599	COIN RETURN COVER
12.	50270151	904581	COIN DOOR FRAME (11 5/8"x13 3/8")
15.	50270159	404357	LOCKING ARM ASSEMBLY

P.C.B. ASS'Y A 102-401

<u>ITEM</u>	PART NUMBER	DESCRIPTION:	<u>USAGE</u> :
1.	50010314	2732, EPROM	3
2.	50070013	18.432 MHz, CRYSTAL	1
3.	50010329	2125AL-2, STATIC RAM	7
4.	50010372 LS	74LS126, I.C.	1
5.	50010096 LS	74LS08, I.C.	4
6.	50010019 LS	74LS74, I.C.	8
7.	50010002 LS	74LS00, I.C.	3
8.	50010252 LS	74LS374, I.C.	1
9.	50010045 LS	74LS157, I.C.	13
10.	50010022 LS	74LS86, I.C.	10
11.	50010005 LS	74LS04, I.C.	4
12.	50010004 LS	74LS02, I.C.	2
13.	50010161 LS	74LS11, I.C.	1
14.	50010035 LS	74LS161, I.C.	6
15.	50010310	2114-200 NS	4
16.	50010105 LS	74LS32 I.C.	1
17.	50010026 LS	74LS107 I.C.	1
18.	50010232	74S288, I.C.	1
19.	50010030 LS	74LS174, I.C.	5
20.	50010195 LS	74LS367	2
21.	50010249 LS	74LS245, I.C.	2
22.	50010192 LS	74LS139, I.C.	3
23.	50010231	74S287, I.C.	2
24.	50010245 LS	74LS21, I.C.	1
25.	50010010 LS	74LS27, I.C.	2
26.	50010261 LS	74LS273, I.C.	4
27.	50010139 LS	74LS175, I.C.	3
28.	50010007 LS	74LS10, I.C.	1
29.	50010009	7425, I.C.	2
30.	50010262 LS	74LS283, I.C.	2
31.	50010369 LS	74LS163, I.C.	2
32.	50010222 LS	74LS194, I.C.	6
33.	50360006	1K OHM, 9 PIN SIP RESISTOR	9

P.C.B. ASS'Y A 102-401

ITEM	PART NUMBER	DESCRIPTION:	<u>USAGE</u> :
34.	50360017	5.6K OHM, 9 PIN RESISTOR	1
35.	50060226	2.2 MFD, 50V, ELECTROLYTIC, RADIAL CAP.	1
36.	50040010	0.1 MFD, 16V, DISC CERAMIC CAPACITOR	39
37.	50040210	200 PF, 16V, DISC CERAMIC CAPACITOR	1
38.	50030095	330 OHM, 1/4 WATT, 5% RESISTOR	2
39.	50030051	1K OHM, 1/4 WATT, 5% RESISTOR	2
40.	50030010	470 OHM, 1/4 WATT, 5% RESISTOR	2
41.	50030085	390 OHM, 1/4 WATT, 5% RESISTOR	1
42.	50030038	100 OHM, 1/4 WATT, 5% RESISTOR	1
43.	50150061	24 PIN I.C. SOCKET	3
44.	50150256	50 PIN RIGHT ANGLE PCB HEADER W/EJECTOR	2
45.	50150346	6 PIN RIGHT ANGLE WAFER	1
46.	50210252	A 102-401 P.C.B. (BARE)	1


P.C.B. ASS'Y B 102-402


ITEM	PART NUMBER	DESCRIPTION:	USAGE:
1.	50010187	Z-80 CPU	1
2.	50010177	AY-3-8910 SOUND GENERATOR	2
3.	50010171	2716, EPROM	3
4.	50010314	2732, EPROM	9
5.	50010341	Z80-A CPU	1
6.	50010370	2K x 8, RAM M58725P (MITSUBISHI)	1
7.	50010340	AUDIO AMPLIFIER M51516L (MITSUBISHI)	1
8	385-08-0100	HEAT SINK	1
9.	50120016	1K OHM, TRIMMER POT	1
10.	50070024	4 MHz, CRYSTAL	1
11.	50010264 LS	74LS368, I.C.	6
12.	50010004 LS	74LS02, I.C.	2
13.	50010222 LS	74LS194, I.C.	6
14.	50010249 LS	74LS245, I.C.	3
15.	50010252 LS	74LS374, I.C.	1
16.	50010310	2114-200 NS	4
17.	50010248 LS	74LS138, I.C.	5
18.	50010096 LS	74LS08, I.C.	5 ,
19.	50010105 LS	74LS32, I.C.	2
20.	50010005 LS	74LS04, I.C.	1
21.	50010019 LS	74LS74, I.C.	2
22.	50010024 LS	74LS93, I.C.	1
23.	50010002 LS	74LS00, I.C.	1
24.	50010045 LS	74LS157, I.C.	4
25.	50010195 LS	74LS367, I.C.	3
26.	50010224 LS	74LS259, I.C.	1
27.	50010192 LS	74LS139, I.C.	1
28.	50010138	4020, I.C.	1
29.	50010373	40H00 4P	1
30.	50060107	1000 MFD, 16V, ELECTROLYTIC, AXIAL CAP.	2
31.	50060227	470 MFD, 16V, ELECTROLYTIC, RADIAL CAP.	1
32.	50060177	100 MFD, 16V, ELECTROLYTIC, RADIAL CAP.	1
33.	50060139	47 MFD, 16V, ELECTROLYTIC, RADIAL CAP.	1

50330031

P.C.B. ASS'Y B 102-402

<u>ITEM</u>	PART NUMBER	DESCRIPTION:	USAGE:
34.	50060120	10 MFD, 16V, ELECTROLYTIC, RADIAL CAP.	1
35.	50060228	4.7 MFD, 25V, ELECTROLYTIC, RADIAL CAP.	1
36.	50060226	2.2 MFD, 50V, ELECTROLYTIC, RADIAL CAP.	6
37.	50130034	8 POSITION DIP SWITCH	1
38.	50130075	4 POSITION DIP SWITCH	1
39.	50360006	1K OHM, 9 PIN SIP RESISTOR	3
40	50040010	0.1 MFD, 16V, DISC CERAMIC CAP.	62
41.	50040059	1000 PF, 25V, DISC CERAMIC CAP.	6
42.	50040211	0.15 MFD, 50V, MYLAR CAPACITOR	1
43.	50040182	0.01 MFD, 50V, MYLAR CAPACITOR	1
44.	50100007	DIODE	2
45.	50100008	LED (MINIATURE)	2
46.	50030125	220 OHM, 1/4 WATT, 5% RESISTOR	22
47.	50030006	4.7K OHM, 1/4 WATT, 5% RESISTOR	7
48.	50030051	1K OHM, 1/4 WATT, 5% RESISTOR	12
49.	50030151	22K OHM, 1/4 WATT, 5% RESISTOR	1
50.	50030063	10K OHM, 1/4 WATT, 5% RESISTOR	1
51.	50030092	1MEG OHM, 1/4 WATT, 5% RESISTOR	1
52.	50150256	50 PIN RIGHT ANGLE PCB HEADER W/EJECTOR	2
53.	50210252	B 102-402 P.C.B. (BARE)	1
54.	50150061	24 PIN I.C. SOCKET	9
55.	10010087	5-40x1/2 PA/PH/MS	4
56.	10150002	5-40 KEP NUT	4
57.	50100014	DIODE	1

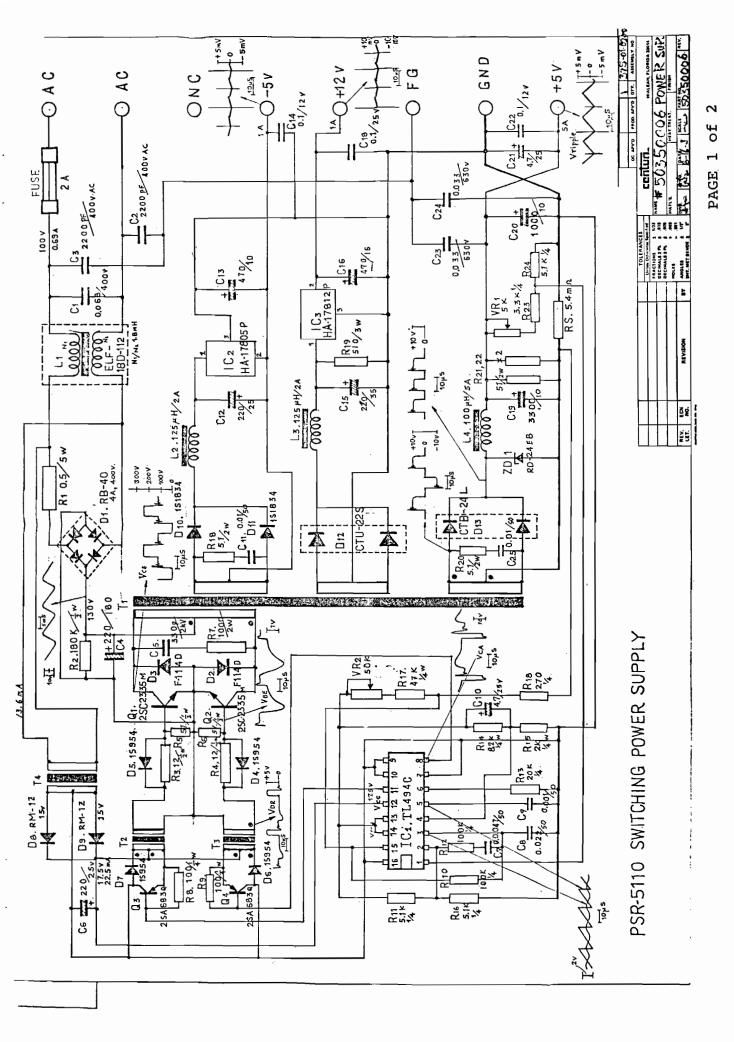

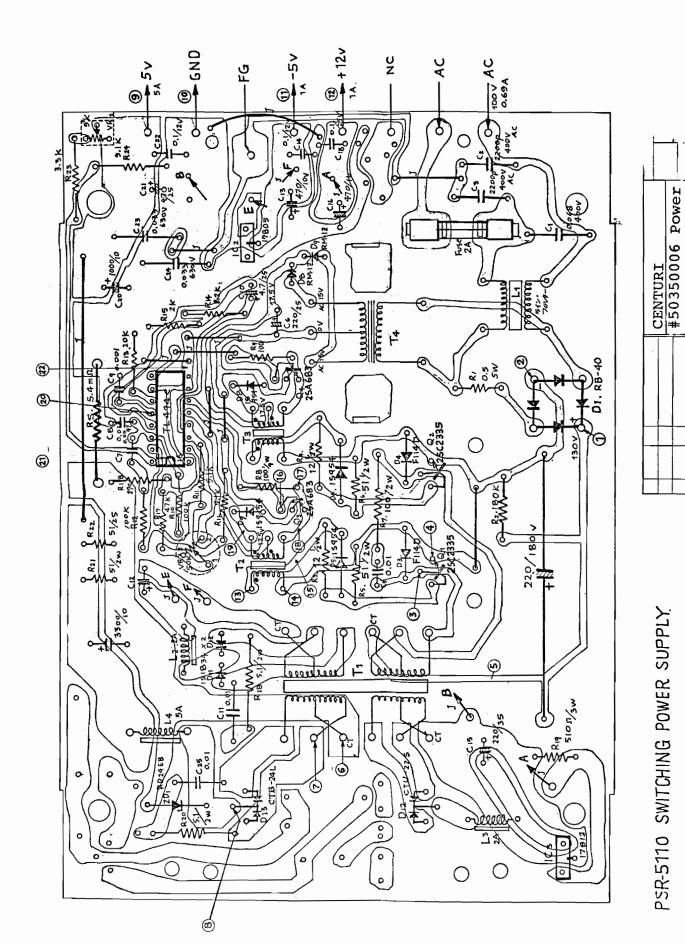

PSR-5110 SWITCHING POWER SUPPLY

of

PAGE 2

26


SUPPLY

PSR-5110 SWITCHING POWER SUPPLY


SYMBOL:	DESCRIPTION:	QNTY.
D1	STACK DIODE	1
D8, D9	RECTIFIER	2 2
D2, D3	HIGH SPEED DIODE	
D4, D5, D6, D7	HIGH SPEED DIODE	4
D13	HIGH SPEED DIODE	4 1 2 1 2 1
D12	HIGH SPEED DIODE	1
D10, D11	HIGH SPEED DIODE	2
ZD1	ZENER DIODE	1
Q1, Q2	TRANSISTOR	2
IC1 IC2	I.C.	1
IC3	I.C.	
T1	PULSE POWER TRANSFORMER	1
т2, т3	PULSE DRIVE TRANSFORMER	2
T4	BIAS TRANSFORMER	ī
L2, L3	R.F. CHOK TRANSFORMER	$\bar{2}$
L4	R.F. CHOK TRANSFORMER	ī
L1	A.C. LINE FILTER	
C2, C3	LINE BY-PASS CONDENSER	3
C1, C23, C24	METALIZED POLIESTER CONDENSER	3
C9	MYLAR CONDENSER	1
C7	MYLAR CONDENSER	1
C11, C25	MYLAR CONDENSER	2
C8	MYLAR CONDENSER	1
C5	CERAMIC CONDENSER	1
C14, C18, C24	CERAMIC CONDENSER	1 1 2 1 2 1 3 3 1 1 2 1 3 2 2
C10, C21	ELECTROLYTIC CONDENSER	2
C13, C16	ELECTROLYTIC CONDENSER	
C20	ELECTROLYTIC CONDENSER	1 1
C19	ELECTROLYTIC CONDENSER	2
C12, C15	ELECTROLYTIC CONDENSER	1
C6 C4	ELECTROLYTIC CONDENSER ELECTROLYTIC CONDENSER	1
R1	CEMENT FUSE RESISTOR	i
R21, R22	METAL RESISTOR	2
R19	METAL RESISTOR	ī
R7	METAL RESISTOR	$\bar{f 1}$
R18, R20	METAL RESISTOR	2
R2, R3, R4, R5, R6,		18
R8, R9, R10, R11,		
R12, R13, R14, R15,		
R16, R17, R18, R23,		
R24		
RS	MANGAN WIRE, 5.4M, OHM	1
VR1	SEMI-FIXED RESISTOR	1
VR2	SEMI FIXED RESISTOR	1
F1	FUSE	1 1
F2	FUSE HOLDER	1
10m/m	NICKEL WIRE, 0.7¢	1
150m/m 100m/m	TUBE, 1.0¢ TUBE, 1.5¢	1 1 1
100m/m J11	LEAD WIRE	1
011	DRVD WIVE	-

PSR-5110 SWITCHING POWER SUPPLY PARTS LIST

SYMBOL:	DESCRIPTION:	QNTY.
J12	LEAD WIRE	1
J13	LEAD WIRE	1
J14	LEAD WIRE	1
	BIND TUBE	3
SM221	MAIN P.C. BOARD	1
	TERMINAL	1
	RATING LABEL	1
	TERMINAL LABEL	1
	BIND SCREW	5
	TRUSS SCREW	8
	TAPPING SCREW	13
	HEX NUT	7
	FLAT WASHER	7
	RECTANGULAR WASHER	6
	SPRING WASHER	7
	MICA WASHER	12
	INSULATION BUSHING	6
	TOP CASE/BOTTOM CASE	2
	FRONT PANEL	1
	REAR PANEL	1
	TERMINAL SUPPORT	1
	HEAT SINK A	1
	HEAT SINK B	1
	HEAT SINK C	1
	HEAT SINK D	1
	METAL HOLDER	4

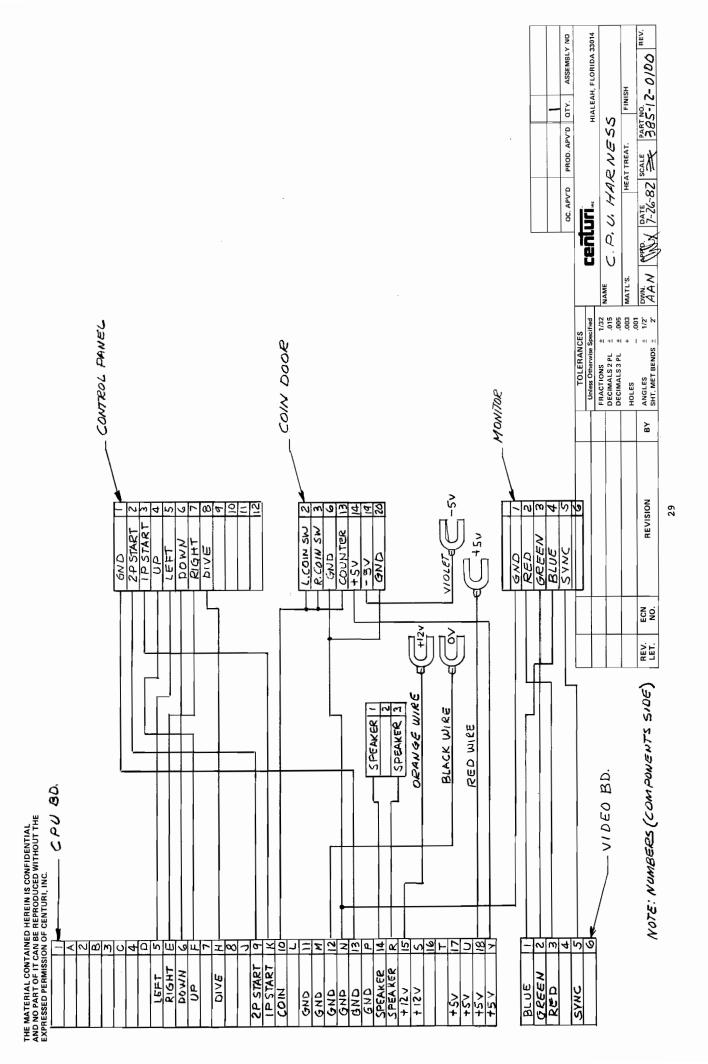


THE MATERIAL CONTAINED HEREIN IS CONFIDENTIAL AND NO PART OF IT CAN BE REPRODUCED WITHOUT THE EXPRESSED PERMISSION OF CENTURI, INC.

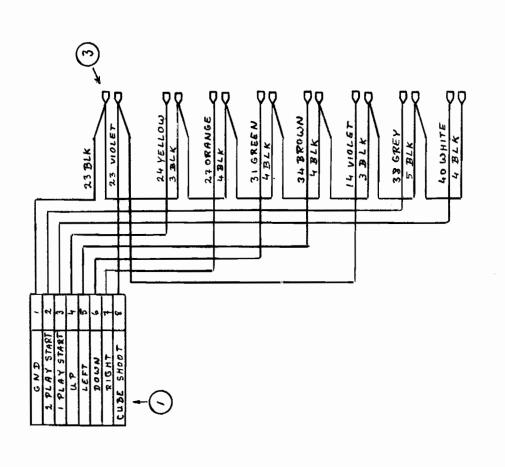


		77/E	BILL OF MATERIALS
ITEM	272	PART NO	DESCRIPTION
,	1	501 50261	501 50261 12 PIN PLUG, HOLEX # 03-09-2122
8	8	501 50222	501 50222 PIN TERMINAL, MOLEX # 02-09-2116
3	91	8002105	3/16" PUSH-ON TERMINAL.
7	10	50270003	TY-WRAP 4"
b	20	9066±105	50179906 INSULATED WIRE, BLACK, 22AWG
9	34	9011±105	" BROWN "
t	27	2014 3306	" 39NARO "
00	24	30442105	" MO773/
9	31	9055 £105	11 N3389 11
01	38	70881105	11 CREY 11
"	70	2000£105	11 311HM 11
12	37	50 17 77 0 S	13701/1 ".


	_	_		т			_	_		1		٦.
V NO			33014							REV.		
ASSEMBLY NO			LORIDA					,)		007	
TY. /			HIALEAH, FLORIDA 33014		1555)		FINISH	`	<u>o</u>	377-12-0400	
ζ۵			Ī		9 R R					PART	0 23	
PROD. APV'D QTY.					EL HI			HEAT TREAT.	(SCAI.E	#	
OC. APV'D	1				18					Г	18-	
OC. A	Í				15			8		DATE	18-8-01	
	†				NAME CONTROL PANEL HARNESS.			MATL'S. Ord ROS) 1 1	AAP/D.	,	
			1	1,10	NAME			MATL'S.		DWN.	J. A.	
	S	cified	5	/35	.015	002		.003	00.	1/2	2°	
	TOLERANCES	rwise So	-	+1	P. +	+		+	1	+1	NDS +	
	TOLE	Unless Otherwise Specified			DECIMALS 2 PL	DECIMALS 3 PL		2	3	LES	SHT. MET BENDS ±	
		5	2	<u>.</u>	DEC	DEC		101	2	ANGLES	SHT.	
										2	- -	
										BEVISION		
										ECN	NO.	
									1		LET.	
						١	4	66	84	. 1 .	-1∀	


377-01-0700

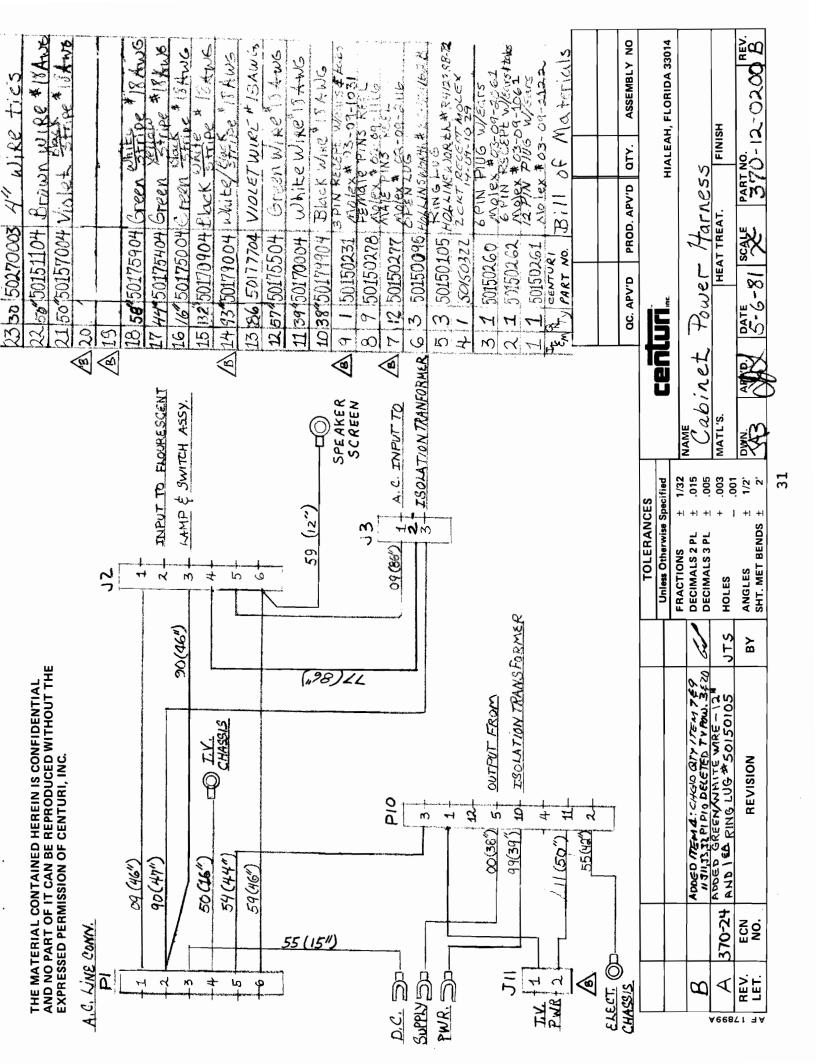



1 365-36-1000 E-GRAT MASS CORPORT 257 1 255-36-3000 E-GRAT MASS CORPORT 257 1 252-36-300 E-GRAT MASS CORPORT 257 1 252-36-36-3600 E-GRAT MASS CORPORT 257 1 252-36-36-3600 E-GRAT MASS CORPORT 257 1 252-36-36-36-36-36-36-36-36-36-36-36-36-36-		50220007 50220004 502200064 502200064 50220064 502200664 502200664 502200664 502200664 502200664 502200664 502200664 502200664 502200664 502200664 50220064 5022	
--	--	--	--

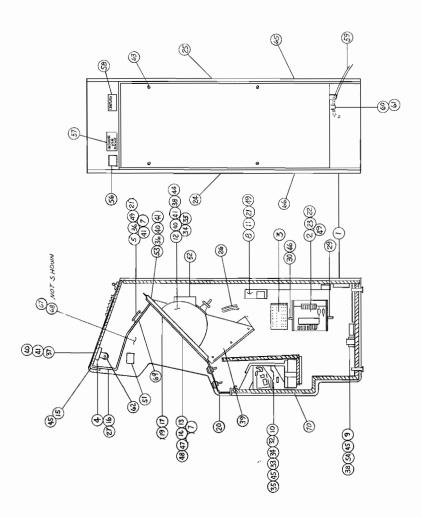


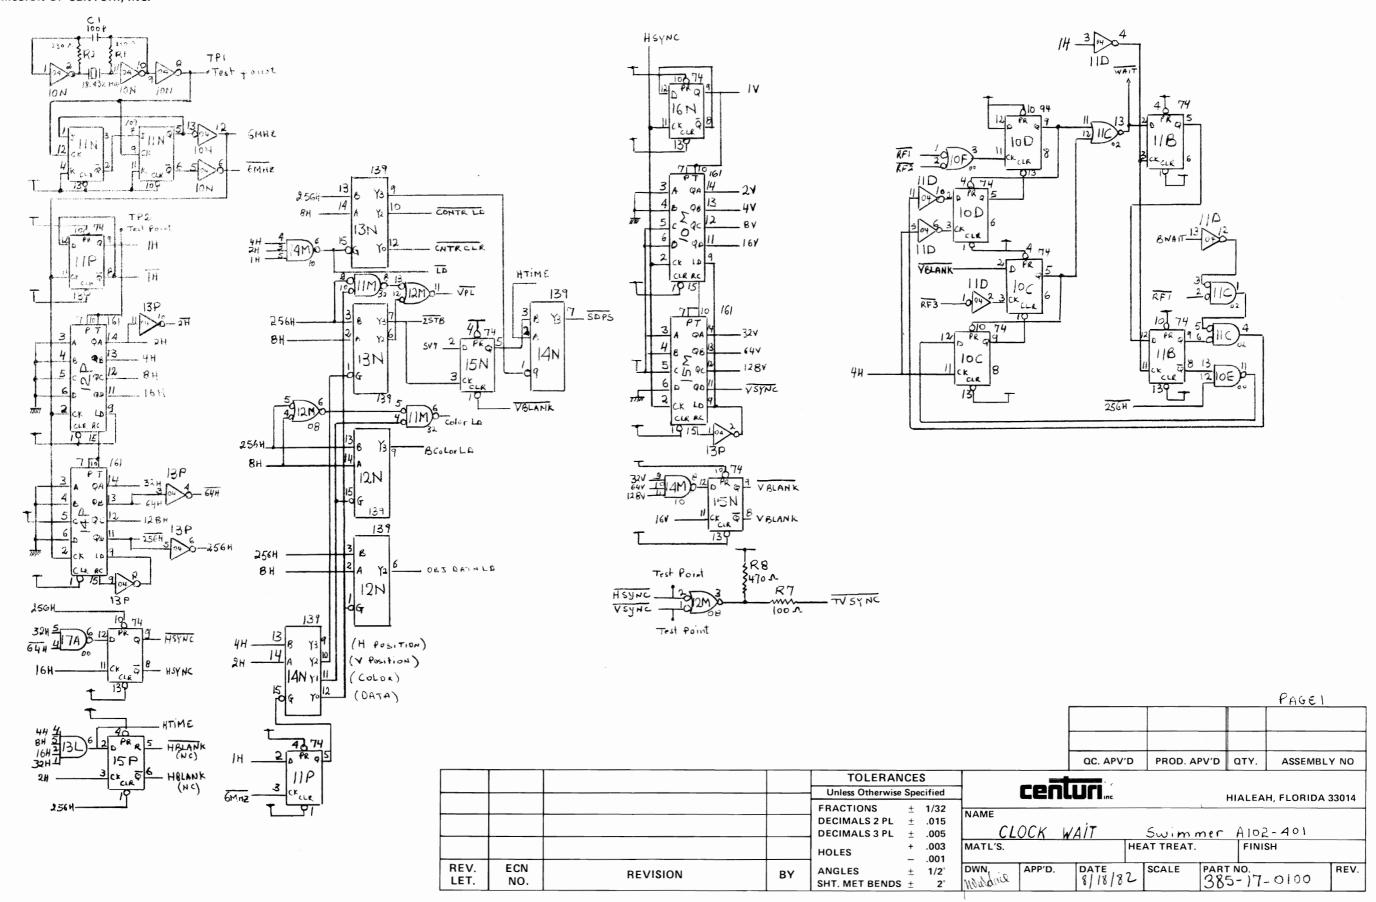


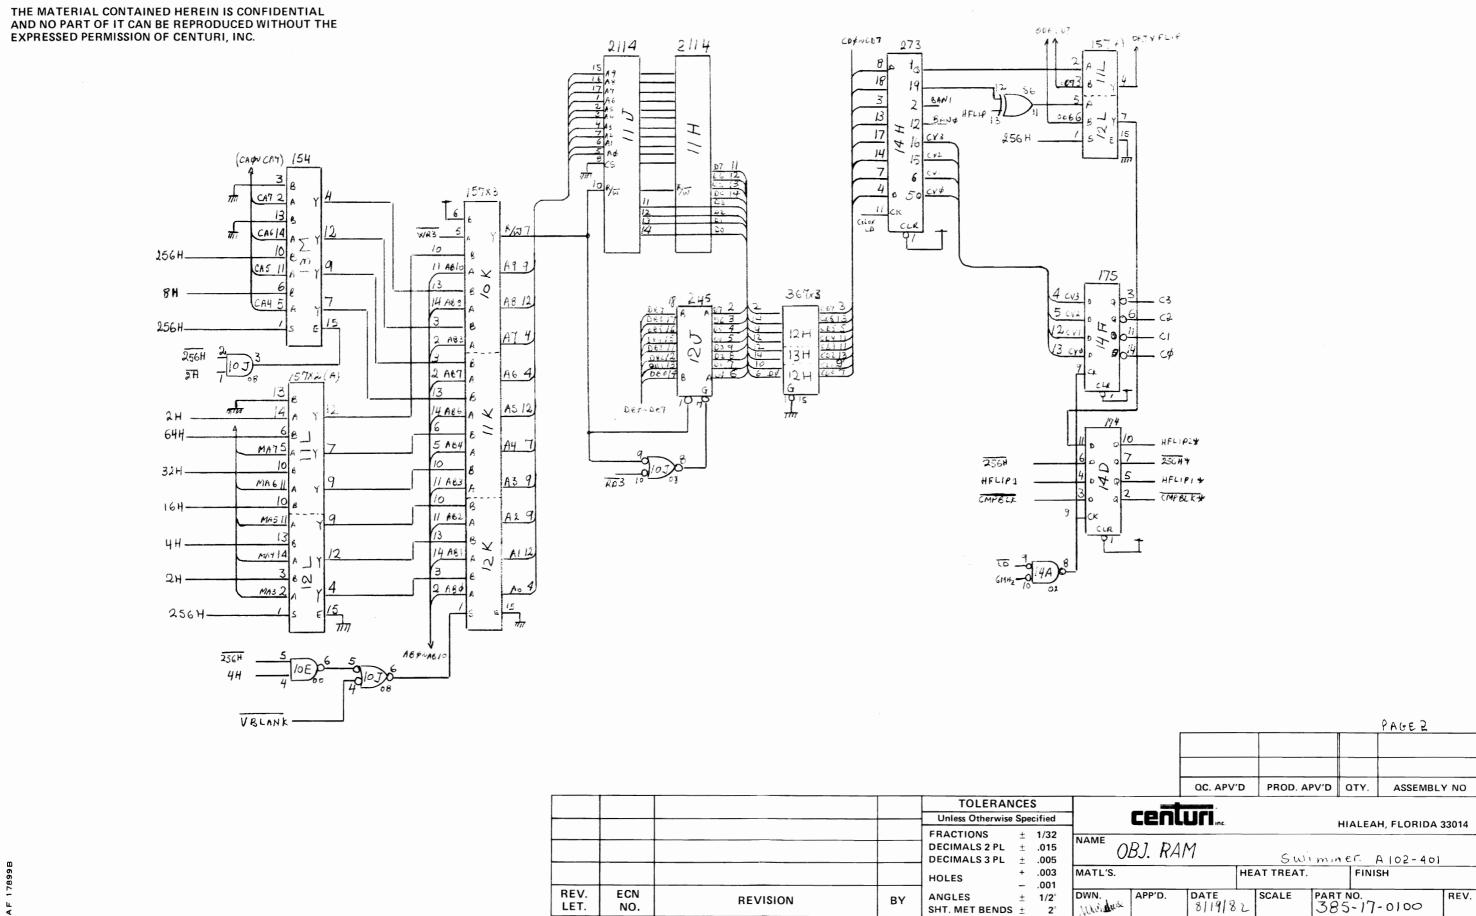

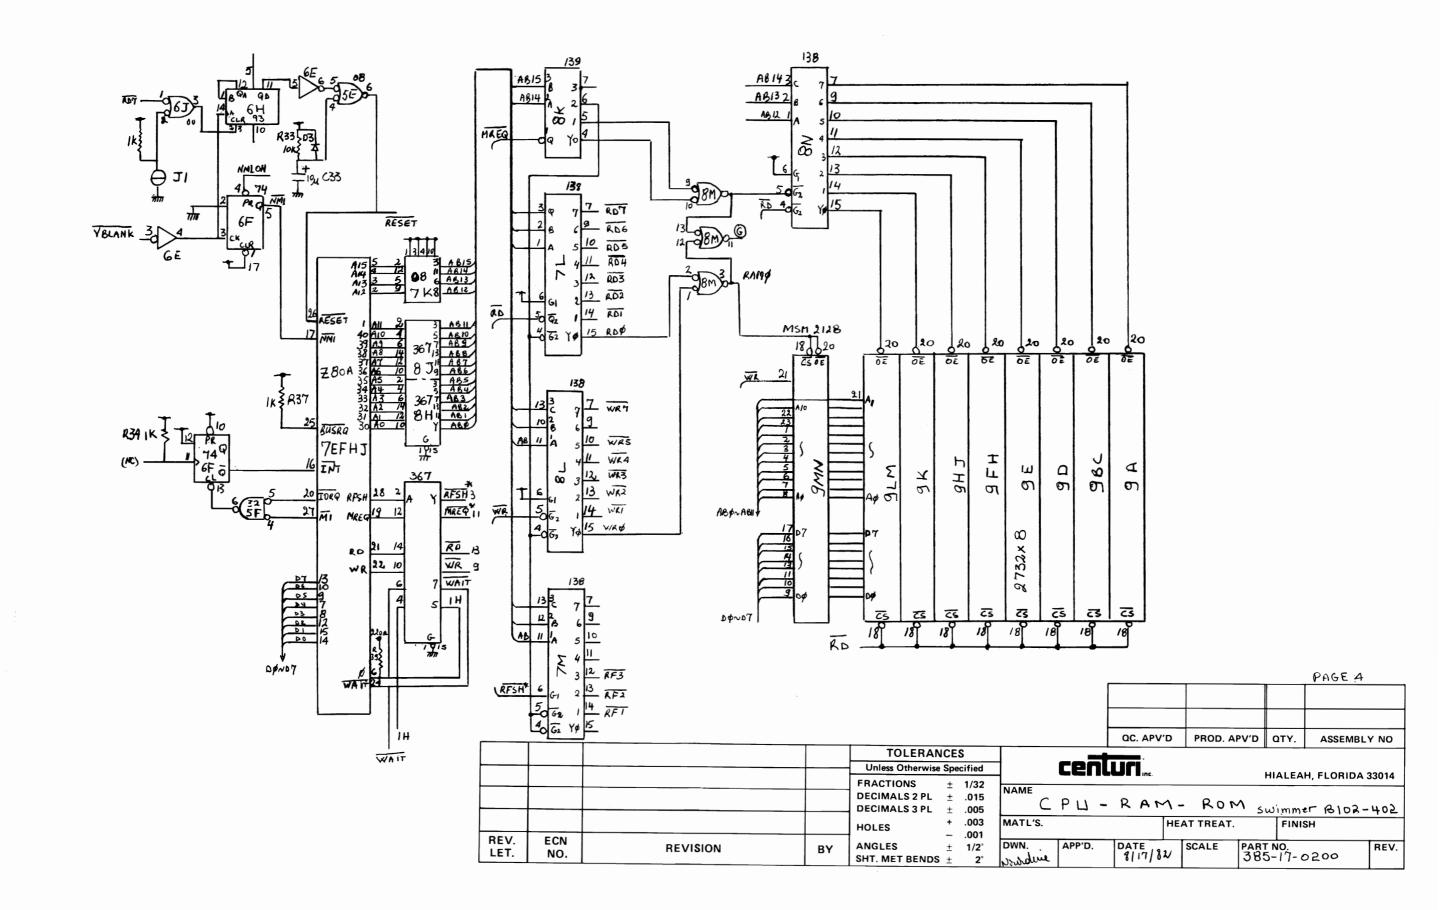


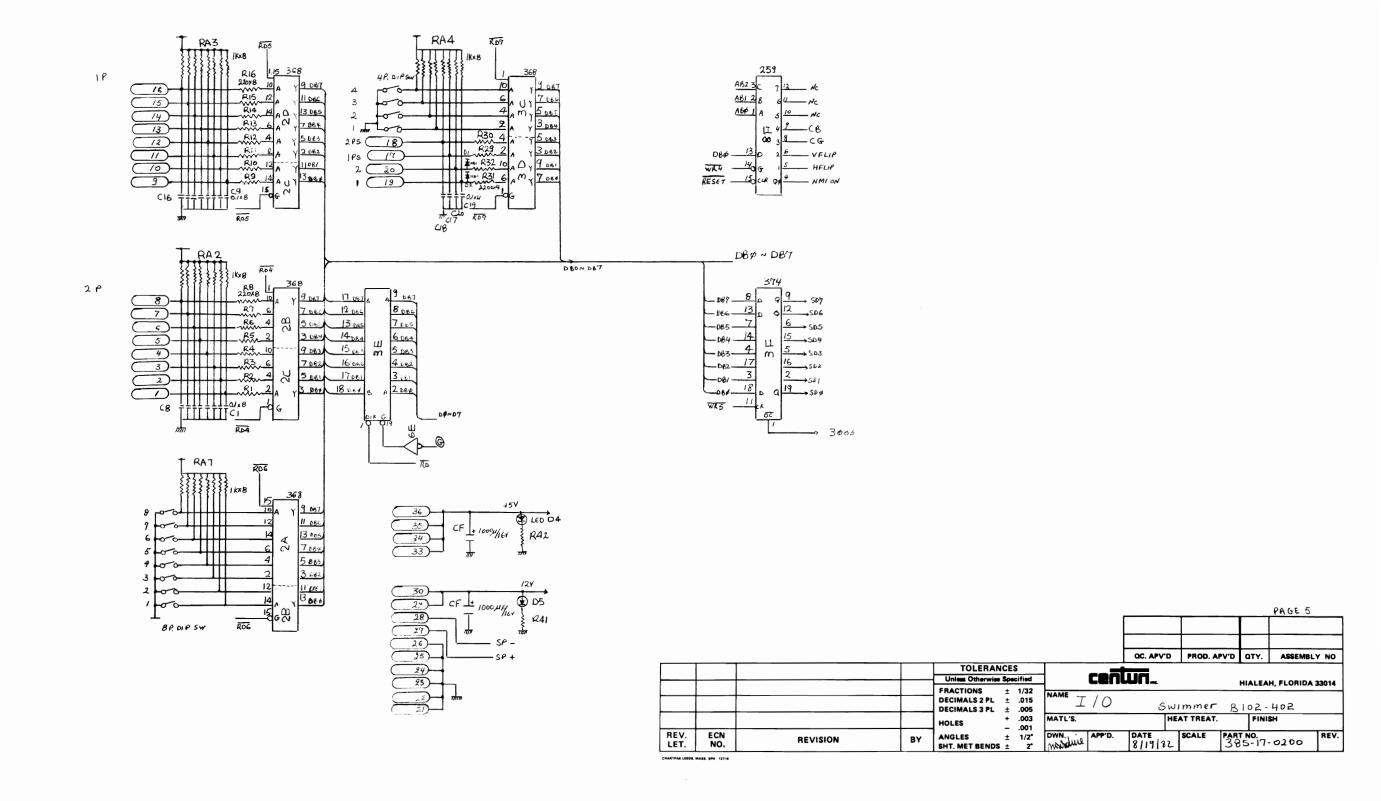

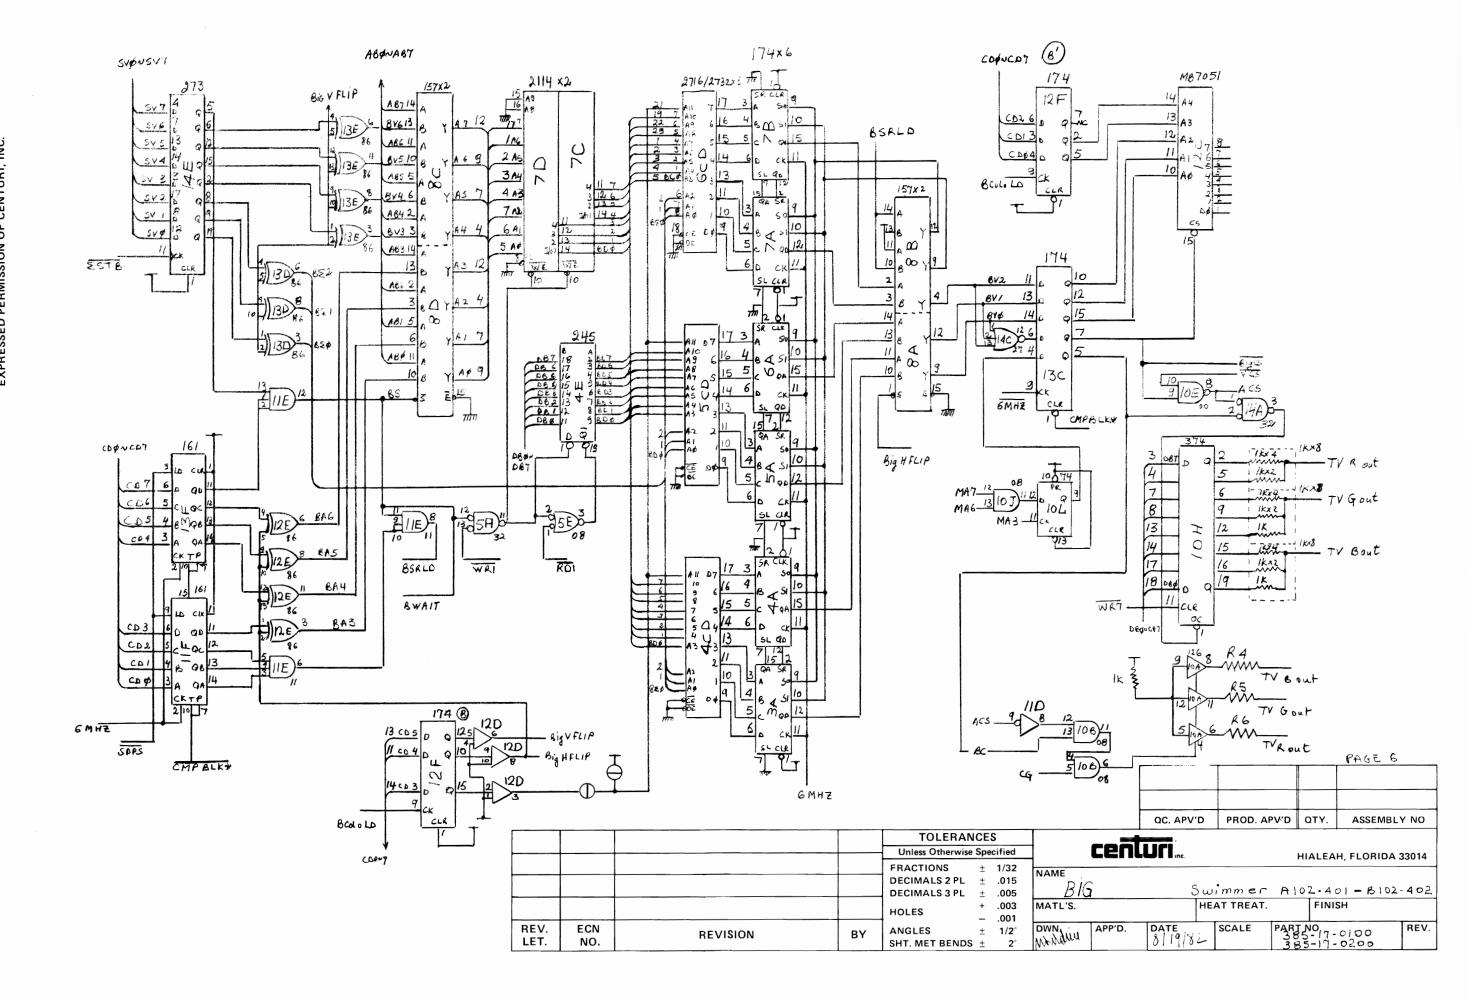

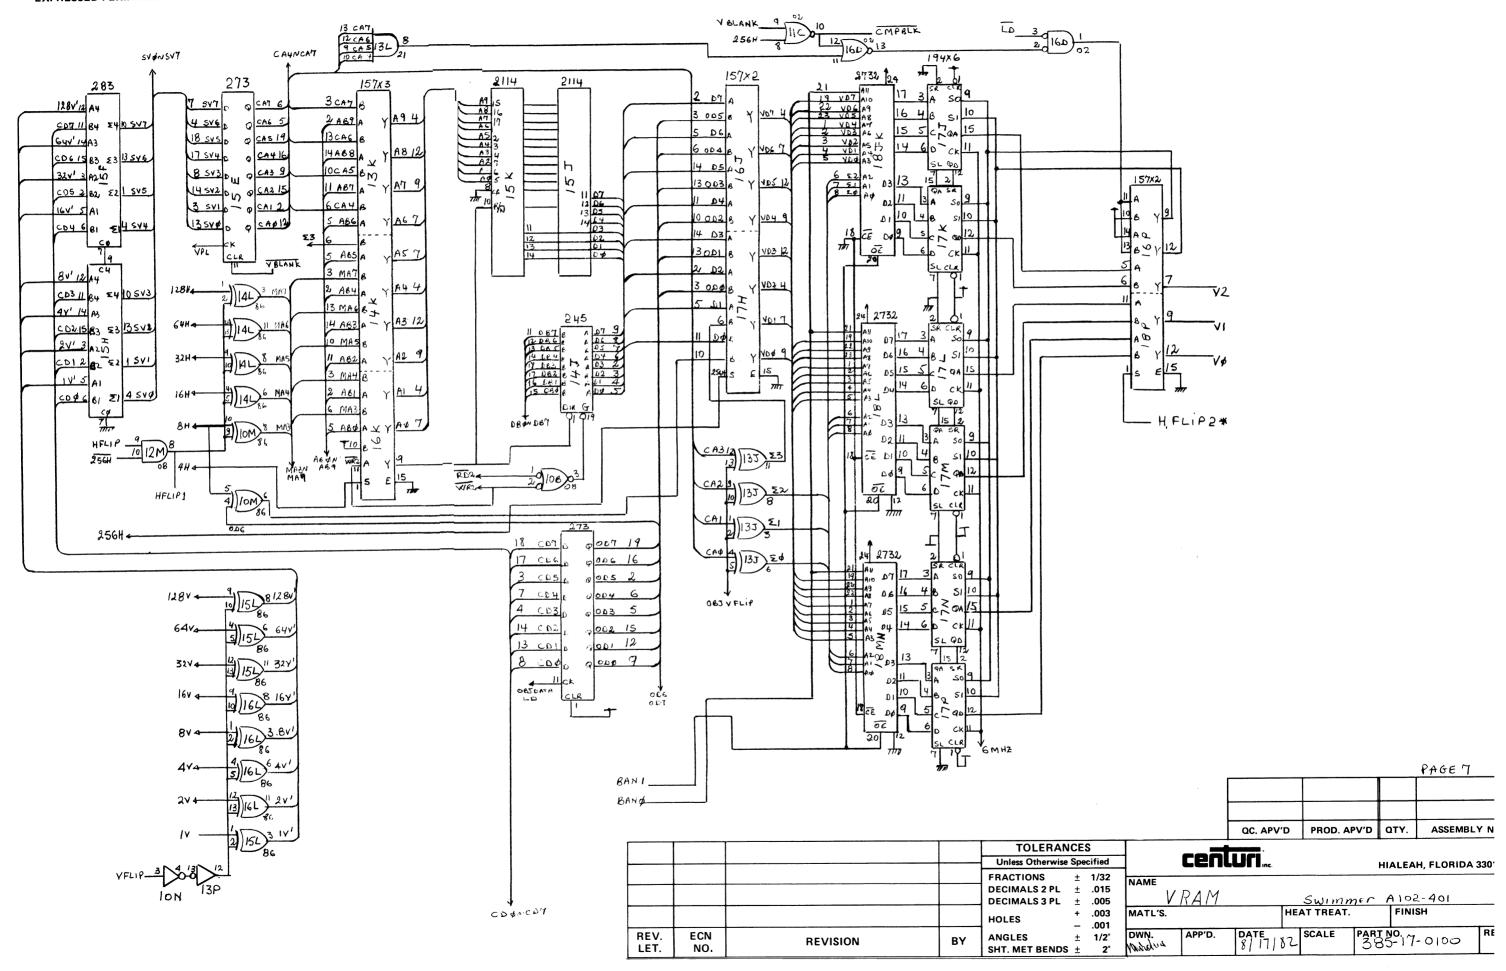


THE MATERIAL CONTAINED HEREIN IS CONFIDENTIAL AND NO PART OF IT CAN BE REPRODUCED WITHOUT THE EXPRESSED PERMISSION OF CENTURI, INC.

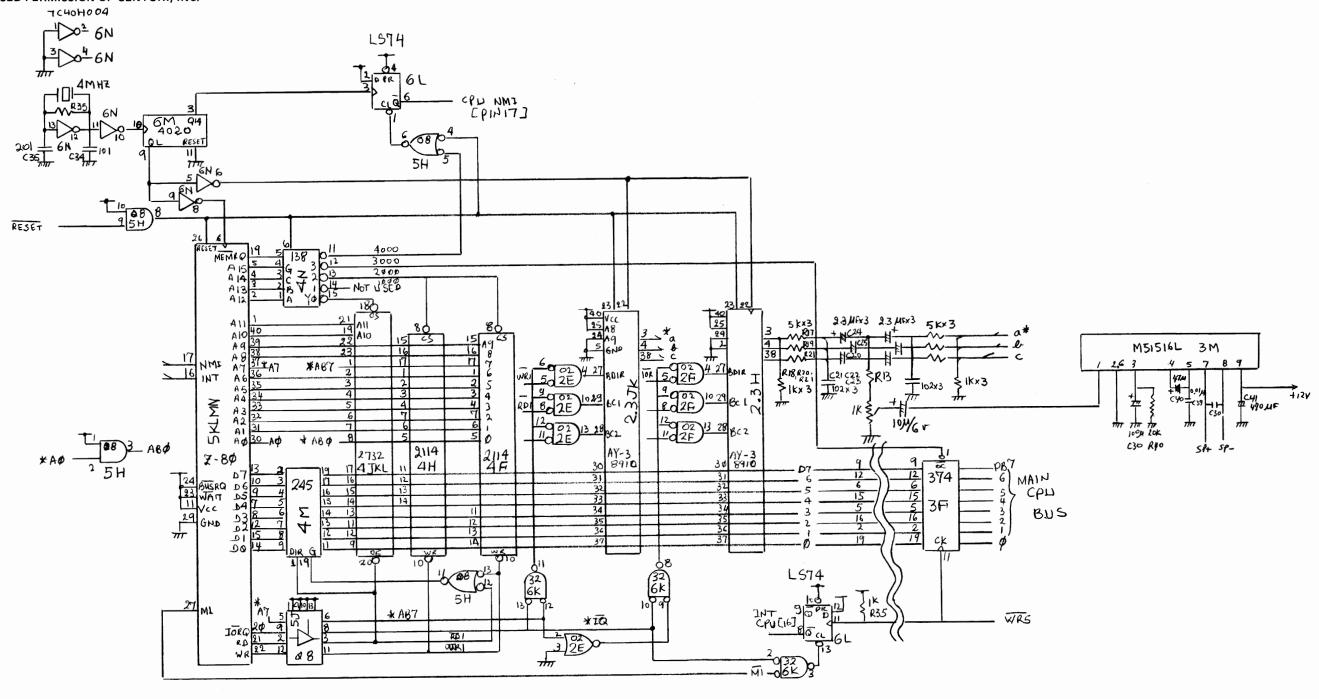

						QC. APV'D	PROD. APV	Ό ΟΤΥ.	ASSEMBLY NO
				TOLERANCES			•		
				Unless Otherwise Specified	cent			ΗΙΔΙ ΕΔΙ	H, FLORIDA 3301
				FRACTIONS ± 1/32	NAME				1,12011127 0001
				DECIMALS 2 PL ± .015 DECIMALS 3 PL ± .005	swimi	ner s	ound	B 102-	402
				HOLES + .003 001	MATL'S.	HE	AT TREAT.	FINIS	Н
REV. LET.	ECN NO.	REVISION	BY	ANGLES ± 1/2° SHT. MET BENDS ± 2°	DWN APP'D.	8 8 82	SCALE PA	ART NO. 85-17 - 0	200 RE

PAGE 8

THE MATERIAL CONTAINED HEREIN IS CONFIDENTIAL AND NO PART OF IT CAN BE REPRODUCED WITHOUT THE EXPRESSED PERMISSION OF CENTURI, INC. $\mathfrak{GGV} \vee \mathbb{A} \wedge \mathbb{M}$

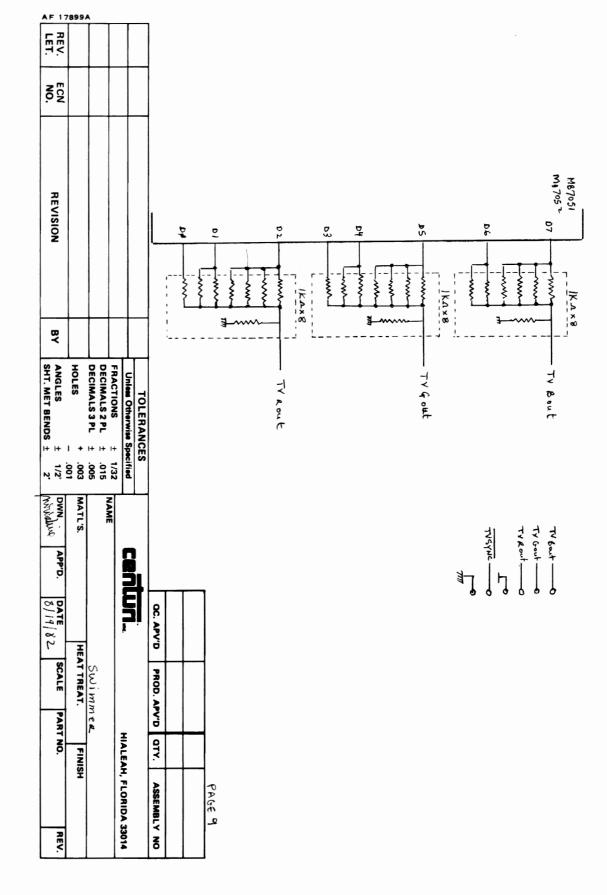



Centuri, Inc. • 245 W. 74th Place • Hialeah, Florida 33014 Telephone: 305-558-5200 • Telex: 803694 • ANSB Centuri Licensed by Tehkan Ltd.